TECHNICAL MANUAL


OPERATOR, UNIT AND DIRECT SUPPORT MAINTENANCE MANUAL INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

TENT, KITCHEN, FLYPROOF, M1948 NSN 8340-00-470-2341

OPERATING	
INSTRUCTIONS	2-1

OPERATOR PREVENTATIVE MAINTENANCE CHECKS AND SERVICES (PMCS) 2-3

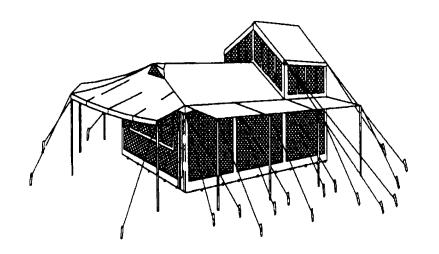

UNIT MAINTENANCE	
INSTRUCTIONS	4-1

UNIT	
TROUBLESHOOTING	4-5

DIRECT SUPPORT	
MAINTENANCE	
INSTRUCTIONS	5-1

REPAIR PARTS AND	
SPECIAL TOOLS LIST	C-1

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*This manual supersedes TM 10-8340-205-13 dated 2 August 1972 including all changes, and TM 10-8340-205-23P dated 27 August 1970 including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY 3 OCTOBER 1995

TECHNICAL MANUAL

OPERATOR, UNIT AND DIRECT SUPPORT MAINTENANCE MANUAL INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

TENT, KITCHEN, FLYPROOF, M1948 NSN 8340-00-470-2341

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located In the back of this manual directly to Commander, US Army Aviation and Troop Command, ATTN- AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798 You may also submit your recommended changes by E-mail directly to <daf2028@st-louis-emh7.army.mil> A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page
CHAPTER 1	INTRODUCTION	1-1
Section I.	General Information	1-1
Section II.	Equipment Description and Data	1-2
Section III.	Principles of Operation	1-4
CHAPTER 2	OPERATING INSTRUCTIONS	2-1
Section I.	Description and Use of Operator's Controls and Indicators	2-1
Section II.	Operator Preventive Maintenance Checks and Services (PMCS)	2-3
Section III.	Operation Under Usual Conditions	2-7
Section IV.	Operation Under Unusual Conditions	2-19
CHAPTER 3	OPERATOR MAINTENANCE INSTRUCTIONS	3-1
Section I.	Lubrication Instructions	3-1
Section II.	Operator Troubleshooting Procedures	3-1
Section III.	Operator Maintenance Procedures	3-4

^{*}This manual supersedes TM 10-8340-205-13 dated 2 August 1972 including all changes, and TM 10-8340-205-23P dated 27 August 1970 including all changes.

TM 10-8340-205-13&P

TABLE OF CONTENTS (Continued)

		Page	Figure
CHAPTER 4	UNIT MAINTENANCE INSTRUCTIONS	. 4-1	
Section I.	Repair Parts; Tools; Special Tools; Test, Measurement, and		
	Diagnostic Equipment (TMDE); and Support Equipment	. 4-1	
Section II	Service Upon Receipt		
Section III.	Unit Preventive Maintenance Checks and Services (PMCS)		
Section IV.	Unit Troubleshooting		
Section V.	Unit Maintenance Procedures		
Section VI.	Preparation for Storage and Shipment	. 4-15	
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	. 5-1	
Section I.	Direct Support Troubleshooting	-	
Section II.	Direct Support Maintenance Procedures		
Occion II.	Birott Gapport Maintenance i Toocaaroo	. 02	
APPENDIX A	REFERENCES	. A-1	
APPENDIX B	MAINTENANCE ALLOCATION CHART	. B-1	
APPENDIX C	REPAIR PARTS AND SPECIAL TOOLS LIST	. C-1	
Section I.	Introduction	. C-1	
Section II.	Repair Parts List	. C-8	
Group 00	Tent, Kitchen, Flyproof, M1948		C-1
Group 01	Tent Body		
•	Tent Jumper Lines	. C-11	C-2
	Tent Hardware	. C-13	C-3
	Tent, Body, Exterior		C-4
Group 02	Screen Wall, Tent		
	Screen Wall, Tent	. C-17	C-5
Group 03	Tent Support and Anchoring		
	Tent Support and Anchoring	. C-19	C-6
Group 04	Tent Cover		
•	Tent Cover	. C-21	C-7
Group 05	Bulk Items	. C-22	
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross-Reference Indexes		
	National Stock Number Index		
	Part Number Index		
	Figure and Item Number Index		

TABLE OF CONTENTS (Continued)

		Page	Figure
APPENDIX D	COMPONENTS OF END ITEM (COEI) AND BASIC ISSUE ITEMS (BII)	D-1	
APPENDIX E	ADDITIONAL AUTHORIZATION LIST (AAL)	E-1	
APPENDIX F	EXPENDABLE AND DURABLE ITEMS LIST	F-1	
APPENDIX G	ILLUSTRATED LIST OF MANUFACTURED ITEMS	G-1	
ALPHABETICAL INDE	ΞX	INDEX	1

HOW TO USE THIS MANUAL

Be sure to read all WARNINGS before using your equipment.

This manual incorporates a quick reference tab feature that allows you to quickly locate the most often referenced subjects and topics appearing in this manual. The reference tab feature consists of the following components:

Cover Page Index

Index boxes are located in the right-hand edge of the cover page. Each index contains a subject title, page number, and black index tab.


Table of Contents

The Table of Contents lists all the major subjects contained in this manual. Subjects that are surrounded by a black box correspond to those that appear on the cover page index.

Page Numbers and Index Tabs

Each page of this manual is identified with a page number. Pages that contain the subjects Identified on the cover page index also contain a black tab on the right edge of the page that aligns with the cover index tab. To use the quick reference tab features, select the title of the subject you are trying to find from the cover page index. You can either turn to the indicated page or bend back the pages and thumb to the page tab that aligns with the cover index tab.

If the cover page is lost or badly worn, page numbers and index tabs can be located by referring to the Table of Contents.

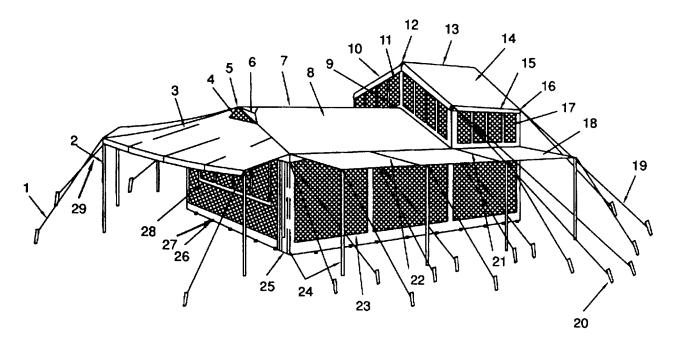

- 1. Line, tent eave guy line
- 2. Pole, upright; 7-foot (2.135-meters)
- 3. Wall (awning), front
- 4. Screen ventilator, front
- 5. Pole, upright; 9-foot (2.745-meters)
- 6. Flap, ventilator, front
- 7. Pole, ridge; 11-foot, 10-inch (3.590-meters)
- 8. Section, service
- 9. Spindle, ridge pole
- 10. Flap, stack, front
- 11. Screen, stack front
- 12. Pole, upright; 12-foot, 3-inch (3.720-meters)
- 13. Pole, ridge; 5-foot, 11 1/4-inch (1.830-meters)
- 14. Section, stack
- 15. Flap, stack, side

- 16. Fairlead, tent line
- 17. Screen, stack, side
- 18. Flap, ventilator, side
- 19. Line, stack guy line
- 20. Pin, tent; 24-inch (61.000-cm)
- 21. Wall (awning), side
- 22. Fastener, slide, side wall
- 23. Wall, screen
- 24. Poles, upright; 6-foot 2-inch (1.950-meters)
- 25. Fastener, slide, entrance
- 26. Pin; 16-inch (40.600-cm)
- 27. Line, footstop, tent screen
- 28. Screen, serving window
- 29. Slip, tent line

Figure 1-1. Tent, Kitchen, Flyproof, M1948.

CHAPTER 1

INTRODUCTION

			PAGE
Section I		General Information	1-1
	1.1	Scope	1-1
	1.2	Maintenance Forms, Records and Reports	1-1
	1.3	Destruction of Army Materiel to Prevent Enemy Use	1-1
	1.4	Preparation for Storage and Shipment	1-2
	1.5	Quality Assurance (QA) Procedures	
	1.6	Reporting Equipment Improvement Recommendations (EIR)	1-2
	1.7	Nomenclature Cross-Reference List	1-2
	1.8	Corrosion Prevention and Control (CPC)	1-2
Section II		Equipment Description and Data	1-2
	1.9	Equipment Characteristics, Capabilities and Features	1-2
	1.10	Location and Description of Major Components	1-3
	1.11	Equipment Data	1-4
Section III		Principles of Operation	1-4
	1.12	General	1-4

SECTION I. GENERAL INFORMATION

1.1 **SCOPE.**

- a. <u>Type of Manual.</u> Operator, Unit and Direct Support Maintenance Manual Including Repair Parts and Special Tools List.
 - b. Model Number and Equipment Name. M1948 Tent, Kitchen, Flyproof.
- c. <u>Purpose of Equipment</u>. The flyproof kitchen tent is a screened shelter designed for cooling and serving food in areas where flies and other insects are numerous.

1.2 MAINTENANCE FORMS, RECORDS AND REPORTS.

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System (TAMMS), as contained in the Maintenance Management Update.

1.3 <u>DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE</u>

Destruction of Army equipment to prevent enemy use shall be in accordance with TM 750-244-3.